


SET UP

from 'flat' to 'float'




1 Insert Frame into (flat) Bag

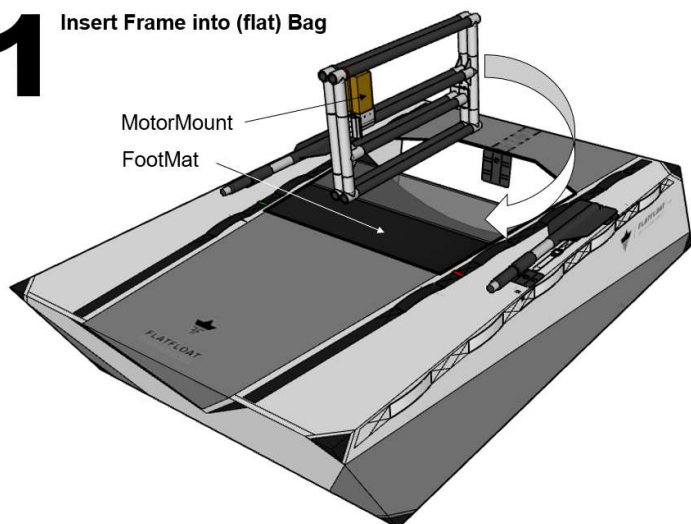


- Hold Frame with wooden MotorMount facing up and forward
- Insert Frame below FootMat (dark net inside Bag)

2 Unfold Frame partly

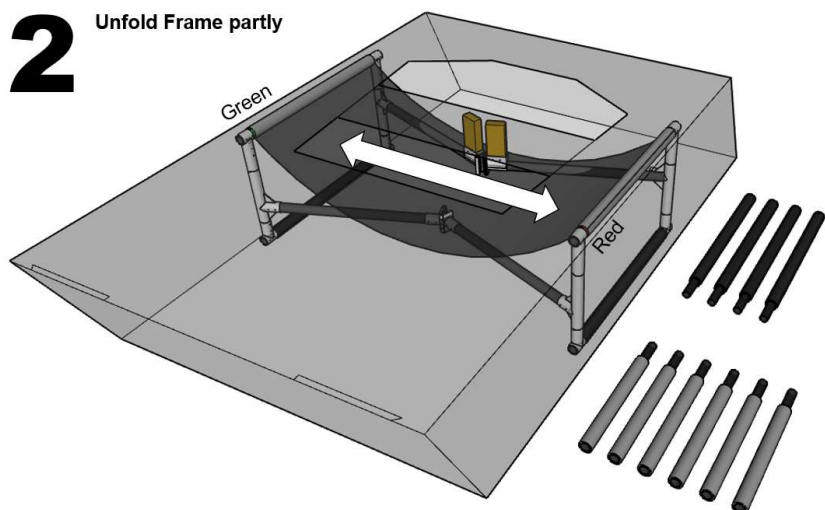


- Extend Frame loosely sideward inside (flat) Bag, almost to its max
- Red side of Frame goes to the left, green side to the right

3 Insert Poles into Frame (front-Poles via 'Pole-Holes')

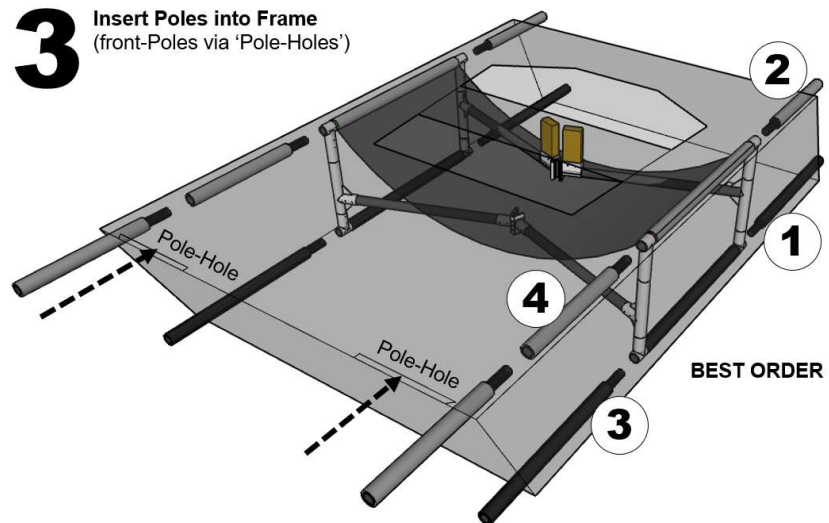


- 6 Short Poles: Up Gray (Top-Poles)
- 4 Long Poles: Down Black (Keel-Poles)

4 Lock Frame

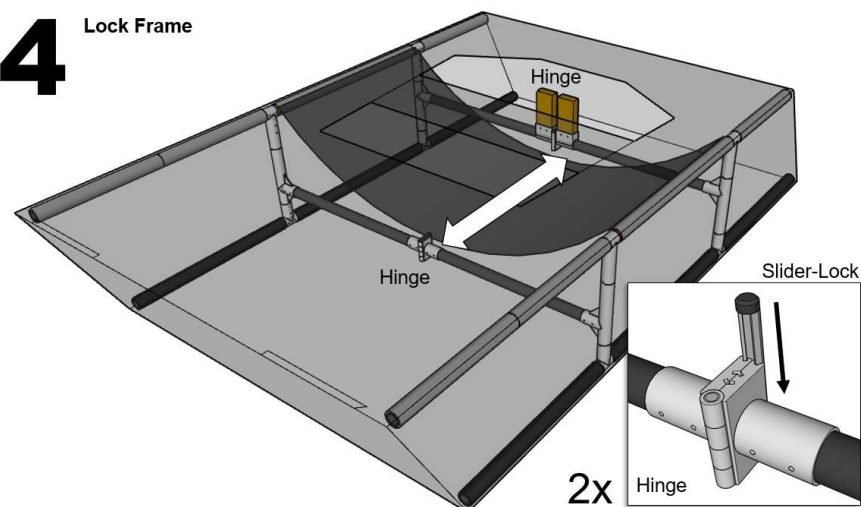


- Unfold Frame fully, to its maximum
- Secure both Hinges in the Frame by placing their Slider-Locks

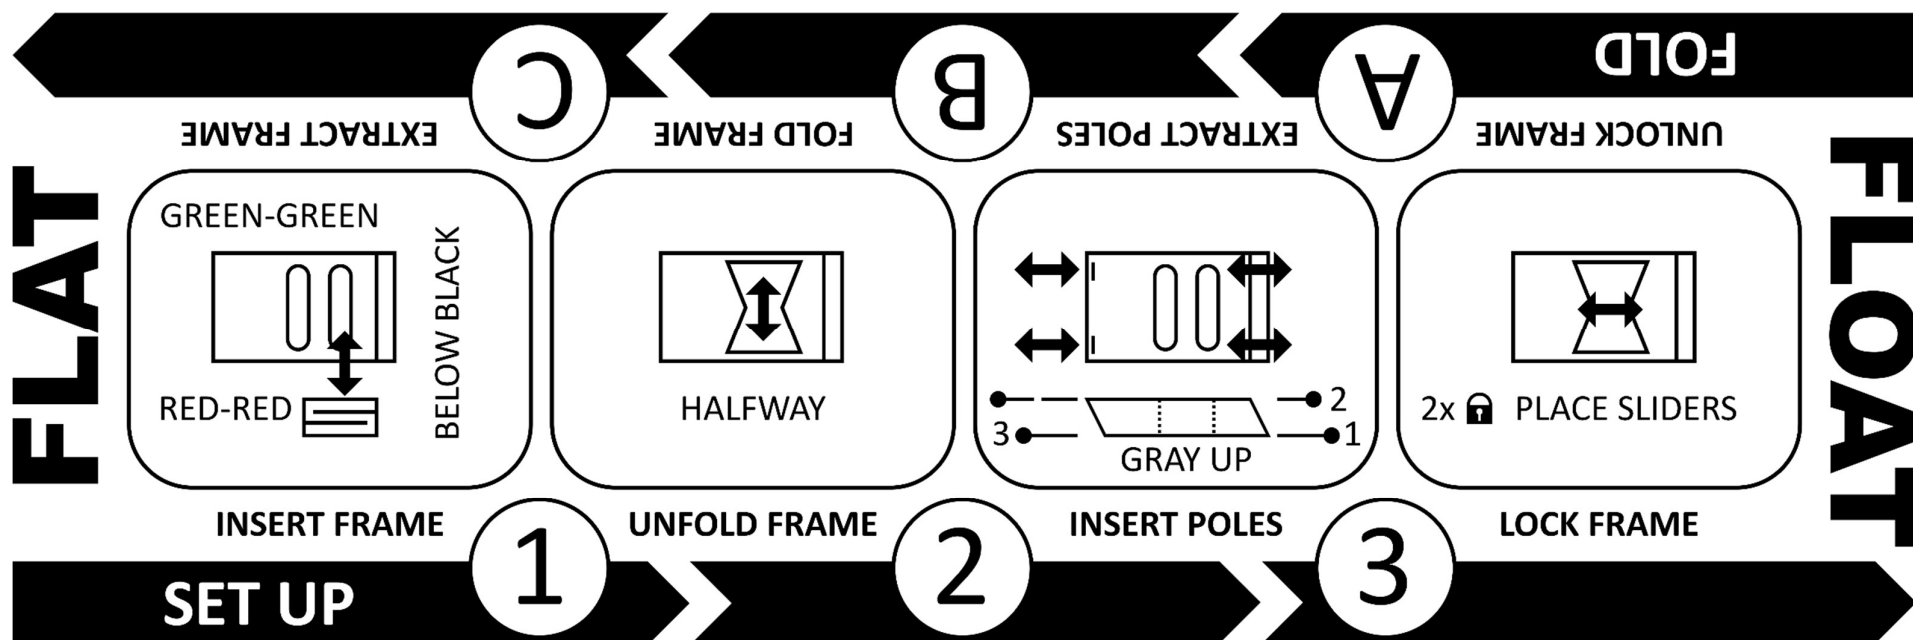

FOLD

from 'float' to 'flat'

- Place the **FLATFLOAT®** on its side
- Unlock both hinges
- Carefully control folding the Frame behind the FootMat:

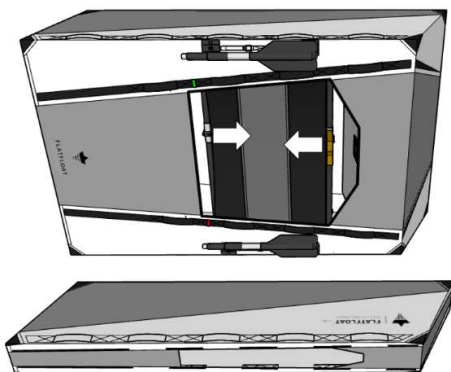

UNFOLD

from 'flat' to 'float'

- Place the **FLATFLOAT®** on its bottom
- Move the rotating arms of the Frame apart
- Lock both hinges

TIP: Step with one foot next to the FootMat into the boat bottom. Use other foot and arms to push Frame-arms apart:

